

5. EXPLOITATION

You should use only and exclusively charcoal or sawdust briquette charcoal. The usage of wood causes barbecue damage (strong dirtiness, soot and tar layers inside chimney hood and its breaking). You should remember that the barbecue, as several other products needs time for "grinding in". So you should lit possible smallest fire at the beginning of usage to allow the barbecue heart harden. Too quick barbecue litting or bad weather conditions (litting of barbecue after recent rain or low temperature) can cause micro-cracking and scratches in its heart part. The arisen micro-cracking and scratches does not affect barbecue usage and can not be considered as damage of the product and reason for claiming.

There is a possibility of colour changes and calcareous efflorescence on concrete products which technically can not be avoided. There is a possibility of rust runs on barbecues finished with natural phyllite or sericite slatestones, the producer does not effect forming of these runs but they can be easily removed by means of rice or wire brush.

Do not use the barbecue in closed rooms.


Do not mount the barbecue on non-hardened unsteady ground.

Do not use for litting up alcohol, gasoline and similar liquids and synthetic materials with poisonous chemicals (eg. plastics, rubber).

6. NOTES

During transportation and carrying of the barbecue parts they should be placed at the same position as during assembling.

Barbecue producer is not responsible for wrong montage, finishing and non-complying to manual usage.

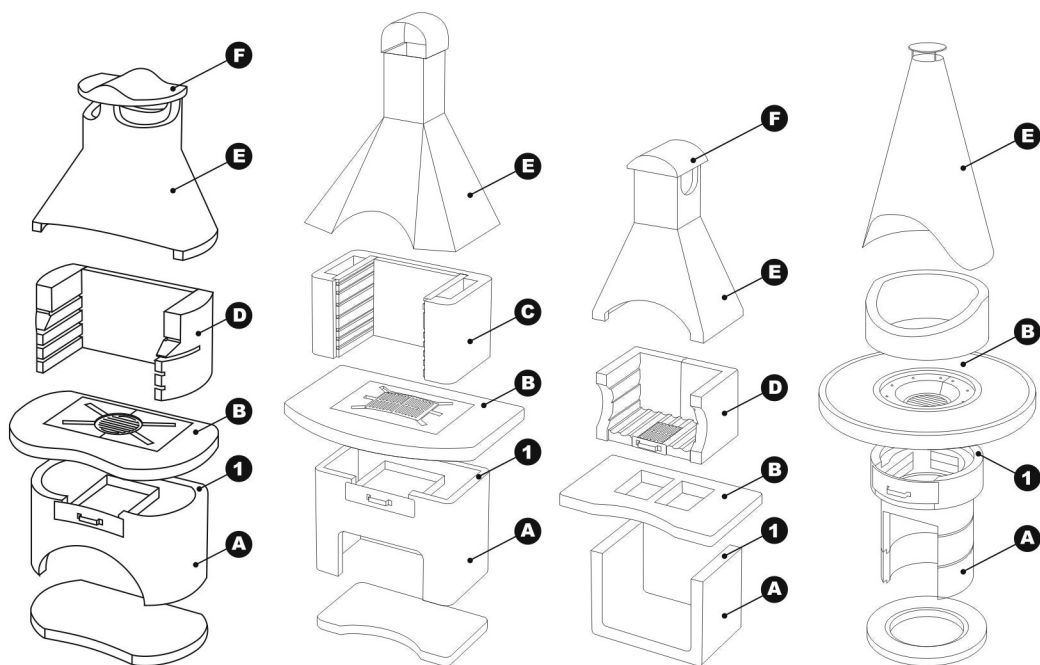

A - base, B - table plate, C, D - hearth, E - chimney hood, F - roof