


Cottage Weathervane Instructions

WEATHERVANE ASSEMBLY




1.
Position brass
ring over rod.




2.
Slide large
ball down
rod to brass
ring.

3. Interlock directionals...
slide on rod.

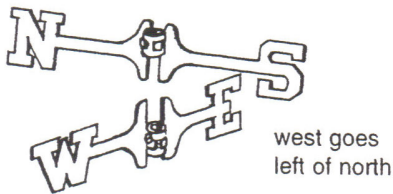

4. Slide small ball on rod...rest on directionals.

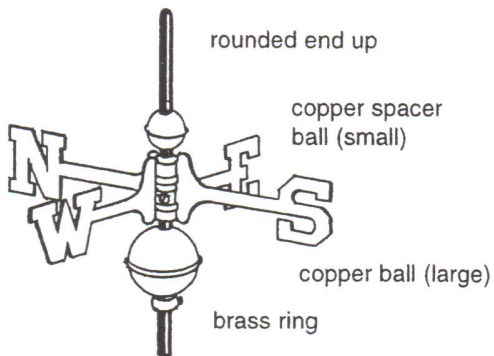


copper bottom
of weathervane



5. Slide weathervane
onto rod.

Slide weathervane
and retaining
hook* onto rod
simultaneously.

copper bottom
of weathervane



Tighten set screw.

retaining hook



*Retaining hook included with
and required for 3-dimension

YOUR PACKAGE INCLUDES

- 1 Weathervane Figure
- 1 Set of Directionals
- 1 Weathervane Rod
- 1 Set of Balls
(one large, one: small)
- 1 Retaining Hook
(if required)
- 1 Mount

