



Farmhouse Weathervane Instructions

COPPER SPACER BALL (SMALL)


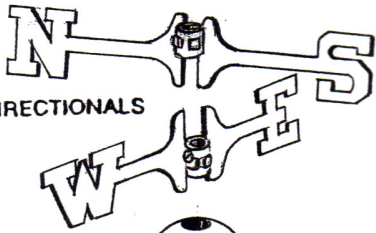


BRASS DIRECTIONALS

COPPER BALL (LARGE)



SMALL ROD

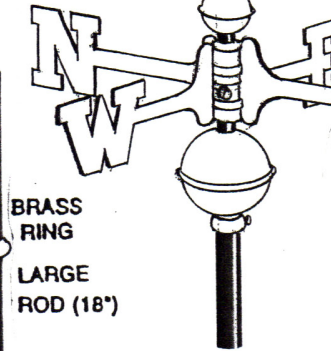

ASSEMBLED VIEW


BRASS RING

LARGE ROD (18")

YOUR PACKAGE INCLUDES THE FOLLOWING PIECES:

- 1 FIGURE
- 1 Small Copper Ball
- 1 Large Copper Ball
- 1 Set of Brass Directionals
- 1 Brass Ring
- 1 Small Steel Threaded Rod
- 1 Large Steel Rod (18")
- 1 Tube of Loctite®

1




POSITION BRASS RING OVER LARGE ROD. TIGHTEN SET SCREW

2

APPLY A LINE OF LOCTITE® (supplied) ACROSS THE THREADS. (This small amount is all that's needed)


THREAD SMALL ROD INTO LARGE ROD. POSITION WRENCHES ON FLAT SPOTS. TIGHTEN FIRMLY.

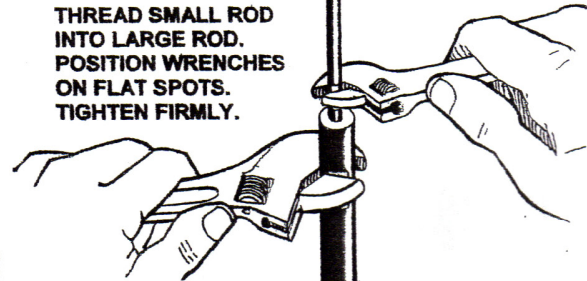

TIP: You may save the remaining LOCTITE® for other uses. Simply reverse the cap for storage


3

SLIDE LARGE BALL DOWN ROD TO BRASS RING.

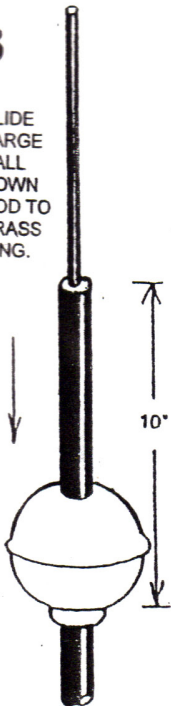

4


INTERLOCK DIRECTIONALS. SLIDE ONTO ROD. TIGHTEN SET SCREWS

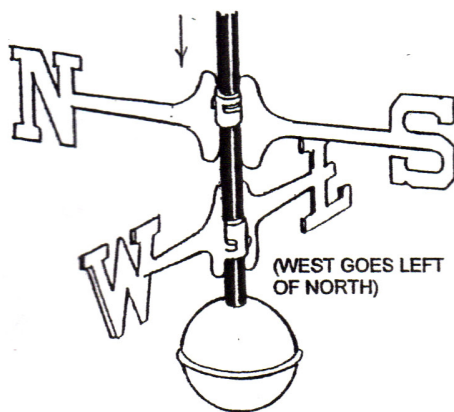

(WEST GOES LEFT OF NORTH)

5

BRASS BOTTOM OF WEATHERVANE TUBE SLIDES OVER SMALL ROD.

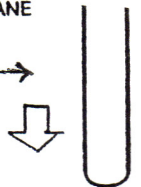

APPLY COMMON GREASE TO ROD SO VANE WILL ROTATE FREELY.

FINAL STEP... SLIDE WEATHERVANE FIGURE ONTO SMALL ROD... ENJOY!

